



智能電飯煲

使用說明書

FS3018B

FS3018R

使用本產品之前，請仔細閱讀本說明書，
並妥善保管以備日後參考。

目錄

安全警告	禁止、強制、注意	03
產品概述	部件及功能	06
	配件清單	07
	操作面板	07
使用說明	快速入門指南	08
	功能說明	08
保養及清潔	拆卸蓋板清潔	11
	蒸氣閥清潔	11
	清潔電飯煲主體	11
服務指南	產品技術資料	12
	電路原理圖	12
	異常現象自我檢查	12

安全警告

提醒

應常時遵循基本安全預防措施，以確保安全使用，避免對用家和他人造成傷害和/或財產損失。

註

本產品不適用於以下情況：
由無人監督的兒童或殘疾人士使用。
兒童玩耍產品。

代表「禁止」內容



禁止使用劣質插頭



禁止濕手接觸



禁止使用可燃產品



禁止兒童操作

- 將產品遠離可燃物品。操作期間，請遠離窗簾、布簾、門簾或類似物品，以免發生火災。
- 請勿使用本產品烹調可導致排氣口堵塞的食物：片狀食物（例如紫菜和大白菜）、帶狀食物（例如海帶）、碎片狀食物（例如粟米渣），以免發生事故和損壞產品。
- 操作期間，請勿將手或臉靠近排氣口，以免燙傷。
- 操作期間，請勿用布或其他物品覆蓋排氣口，以免發生意外和損壞產品。
- 請勿改造產品：除維修技術人員外，任何人士均不得拆卸或維修產品，以免導致火災、觸電和人身傷害。
- 請勿使用 AC 220V 以外的電壓，以免發生火災及觸電。如果電源線損壞，請勿使用本產品。
- 請勿以下列方式操作本產品，以免因電源線損壞而引起火災和觸電：強行彎曲電源線，使其靠近高溫物體，捆綁電線或用作承載重物。
- 如果電源插頭損壞，請勿使用本產品，以免發生火災、觸電和短路。
- 請勿用濕手插拔插頭，以免觸電及受傷。
- 操作期間，請勿移動或搖晃產品。
- 請放在無人看管的兒童和嬰兒接觸不到的地方，以免觸電和燙傷等危險事故發生。

安全警告

- 請勿放在不平穩、潮濕的地方或靠近其他火源和熱源（如爐具）。應至少保持 30cm 距離。否則，產品可能會損壞或發生事故。
- 請勿將針、鐵絲或其他物體插入產品底部的排氣口，以免觸電及受傷。

❗ 代表「強制」內容

- 請勿將產品浸入水中或用水沖洗。
- 獨立使用額定電流高於 13A 的接地插座。與其他電器一起使用時，插座會發生異常並導致火災等危險。如果電源線太短，用家應使用擴展插座連接。請勿使用劣質插座。產品的功耗不得超過擴展插座的最大負載。
- 清潔電源線兩端和產品插座上的灰塵和水，以免發生火災、觸電和短路。
- 如需要維修或更換部件，請將產品送交授權的專業服務中心進行維修，以免因維修不當或配件選擇不當而造成危險。

- 插頭應徹底插入插座，以免發生火災、觸電和短路。
- 如果電源線損壞，應由製造商、維修部門的專業人員或類似人員更換電源線。
- 本產品僅供家庭使用。

註：保險絲等重要配件，如維修不當或私自短路，可使產品保護失效，並導致過熱或火災。

⚠ 代表可能導致輕傷或財產損失的「注意」事項

- 本產品只可使用原裝內鍋，以免過熱和異常。
- 請勿跌落內鍋，以免變形。
- 請勿用硬物撞擊內鍋，以免變形。
- 在進行操作或剛完成操作時，請勿直接觸摸內鍋，以免燙傷。
- 使用前，擦拭內鍋外的水，以免發生故障。
- 使用前，請清除包括水滴和米飯在內的異物，以免過熱和短路。

💡 代表「溫馨提示」內容

- 圖片僅供參考，產品以實物為準。
- 使用前，檢查內鍋和蒸汽閥是否到位，以免發生意外。
- 首次使用時或長時間存放後，加水至蒸汽水位線，選擇「蒸煮」功能，並蒸煮一至兩次以清潔電飯煲內部。

安全警告


- 使用期間，產品發出輕微嘀嗒或嘶聲為正常現象，毋須驚慌。
- 首次烹調後請勿立即使用本產品，按「取消」按鈕，並等待 15 分鐘以上讓加熱板冷卻。
- 請勿用熱水煮飯，以免影響溫度控制器的判斷，影響煮飯效果。
- 請定期清潔蒸氣閥。
- 請定期清潔放置產品的枱面。
- 產品正常運作的海拔範圍為 0~2000m。
- 如需要維修或更換部件，請將產品送交授權的服務中心進行維修，以得到專業優質的服務。請保留本說明書以備將來參考。多謝。
- 在缺乏負責其安全的人士監督或指導之下，身體感到不適、精神狀態不佳或缺乏相關經驗與知識的人士（包括兒童），均不適宜使用本產品。
- 請照看兒童，確保他們不會把玩電器。
- 本產品供家居及類似環境使用，如：
 - 店舖內的員工廚房區域、辦公室及其他工作環境；
 - 農舍；
 - 供客戶於酒店、汽車旅館及其他住宅類型環境；
 - 床及早餐類型環境；
- 電源線如有損壞，請以製造商或服務代理商提供的特殊電源線或部件進行更換。
- 清潔、維護、移動或不使用時，請關閉本產品或拔下插頭。
- 請勿將本產品的任何部分浸入水或其他液體中。
- 使用後請勿觸碰產品的發熱表面，以免燙傷。
- 警告：避免沾濕連接線。
- 警告：誤用可能會導致受傷

產品概述

部件及功能

△ 註

本說明書內所有圖片均以 FS3018 產品為例。圖片僅供參考。由於產品類型和批次不同，實際產品存在差異。

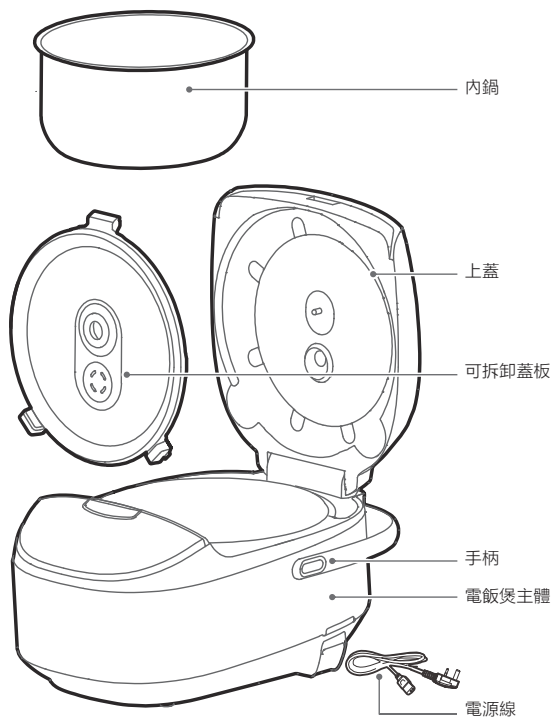

產品概述

配件清單



飯勺 X1



可掛湯匙 X1




量杯 X1



蒸籠 X1

操作面板

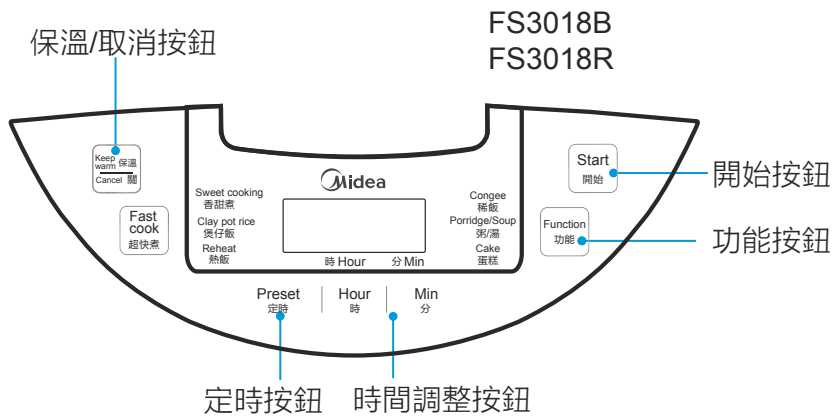

使用說明


快速入門指南

預約烹調

例如，預約 3 個量杯的絲苗長粒米來煮精華飯，並在 8 小時後完成。

1 準備米和水

例如：煮 3 杯絲苗長粒米
將洗過的米放入內鍋，根據米飯量加入適當的水。

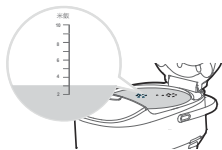

2 功能選擇

關閉電飯煲蓋，按「功能」按鈕，選擇所需的機能（如「香甜煮」）。



3 設定定時結束時間

溫馨提示：

顯示狀態以實物為準；
按「定時」按鈕，進入定時時間調整模式，然後按「時」或「分」按鈕調整定時時間。



4 開始烹調

按「開始」按鈕，烹調將在指定時間完成。



5 取消烹調

按「保溫/關」按鈕可取消所選的烹調功能。



溫馨提示

- 在預約定時模式下顯示的時間為從開始到完成烹調的時間；
- 定時時間不應超過 12 小時，否則可能會出現異味；
- 確保「蛋糕」、「煲仔飯」、「熱飯」功能沒有使用定時模式；
- 所選烹調功能的定時時間不應少於烹調時間，如「粥」，烹調時間為 2 小時，定時時間應超過 2 小時，否則烹調將立即開始。

功能說明

「功能」按鈕用法說明：

按「功能」按鈕，指示燈將位於所選功能。選擇所需功能後，按「開始」按鈕啟動所選功能。

Function 功能

Sweetcooking/Clay pot rice/Reheat/Congee/Porridge/Soup/Cake/Fast cook
香甜煮/煲仔飯/熱飯/稀飯/粥/湯/蛋糕

關於「超快煮」的特別說明（僅限於具有此功能的產品）：

「超快煮」功能基於美的電飯煲烹調「五部曲」的程序原理飯量和其他因素相同時，烹調時間會比其他模式短。

蛋糕

1 材料準備：

- 少量：3 隻雞蛋、100g 砂糖、120g 蛋糕粉（泡打粉）、30g 牛油（未融）；
- 大量：5 隻雞蛋、180g 砂糖、200g 蛋糕粉（泡打粉）、50g 牛油（未融）。

使用說明

- 加入糖、雞蛋，用發蛋器攪拌雞蛋至起泡。加入蛋糕粉，攪拌並快速混合，在泡沫消失之前，迅速將其倒入電飯煲中烘烤。

- 按「功能」按鈕，選擇「蛋糕」功能。

Function
功能

▷ Cake
蛋糕

煲仔飯

- 將材料（如排骨）和調味料（如洋蔥、薑、大蒜和醬油）均勻攪拌混合，並根據個人口味稍微醃製材料。




- 按「開始」按鈕進入工作狀態。

Start
開始

煲湯

- 準備煲湯的材料（如豬頭、粟米、胡蘿蔔等），洗淨所有材料，切成小塊，然後放入內鍋，加入不超過最高水位的水。

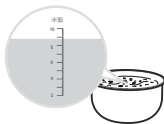

- 用量杯將洗過的白米（不超過4杯）倒入內鍋，加入適量的水，並加入適量的花生油，在內鍋中與白米攪勻。



- 關閉煲蓋

- 按「功能」按鈕選擇「煲仔飯」功能，然後按「開始」按鈕。

Function
功能

▷ Clay pot rice
煲仔飯

- 按「功能」按鈕，選擇「湯」功能。

Function
功能

▷ Soup
湯

- 在烹調期間聽到通知音效時，將醃製的材料鋪在米飯上，關閉煲蓋，然後耐心等待烹調完成。



使用說明

熱飯

使用熱飯功能時，最大煮米量不得超過刻度 4。

- 翻鬆米飯；在米飯表面撒上 50-80 克水（以刻度 2 以下的米飯量為例）。



- 按「功能」按鈕選擇「熱飯」功能，然後按「開始」按鈕。



- 進入保溫過程後，請在 30 分鐘內翻鬆米飯，口感更佳。



保溫

- 按「保溫/關」按鈕進入保溫模式。



- 建議在保溫模式 30 分鐘內將米飯翻鬆，味道會更佳。




溫馨提示：

- 所有功能均會在完成烹調後，自動進入保溫模式；
- 保溫期間，產品將加熱以保持溫度在 65 攝氏度以上。
- 產品可實現 24 小時保溫功能；

使用水位線

煮飯 稀飯 粥

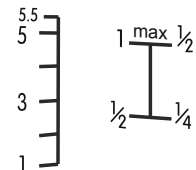

FS3018B/FS3018R 水位線

米飯：加水時，請根據米的種類選擇相應的水位線。

註：煲仔飯最多只能煮 4 杯米

米飯

產品規格	最大煮米量	最小煮米量
FS3018B FS3018R	5.5 杯	1 杯

稀飯：加水時請參考稀飯的水位線。

稀飯

產品規格	最大煮米量	最小煮米量
FS3018B FS3018R	1 杯	0.5 杯

粥：加水時請參考粥的水位線。

粥

產品規格	最大煮米量	最小煮米量
FS3018B FS3018R	0.5 杯	0.25 杯


保養及清潔

拆卸蓋板清潔

⚠ 註

清潔時，確保產品沒有連接電源。

- 1 按下**白色按鈕 a**，向外拉並取下蓋子。

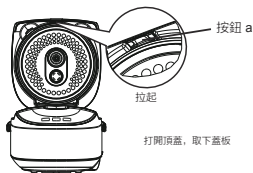


- 2 用水沖洗整個蓋板並用布擦乾；




- 3 對準頂蓋槽帶插入蓋板，在**按鈕 a** 附近按下煲蓋，聽到「咔嚓」聲，即安裝完成。

蒸氣閥清潔

- 1 將其拉起並取下蒸氣閥。

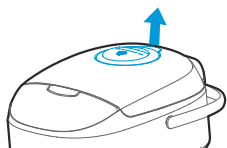

- 2 按照蒸氣閥上的拆卸標記拆卸後，清洗蒸氣閥內部，然後按拆卸和安裝標記安裝。

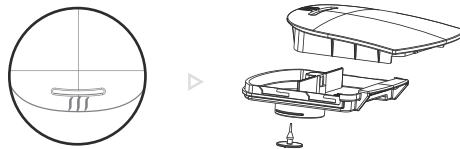


- 3 安裝時，只需將蒸氣閥按回原位即可。

清潔電飯煲主體

- 1 用濕布擦拭內蓋；請勿直接用水清洗。



- 2 用乾淨的布清潔儲水缸和加熱板上的水、米粒等殘渣。

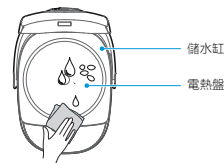

- 3 用乾淨的布擦拭內鍋的底部和外表面。



服務指南

產品技術資料

型號	額定電壓/ 額定頻率	額定功率	額定容量	煮米量	產品尺寸 長 x 寬 x 高	重量
FS3018B FS3018R	220V~50Hz	605W	1.0L	1-5.5 杯	330*245*198mm	3.00Kg

烹飪時間參考


FS3018B/FS3018R	快捷鍵	功能選擇鍵							
		烹飪模式	超快煮	香甜煮	煲仔飯	熱飯	稀飯	蛋糕	粥/湯
		烹飪時間	約 30 分	約 37 分	約 53 分	約 25 分	約 36 分	約 43 分	1hr~4hr 可 煮 2~1.5hr
			烹飪時間不可調						烹飪時間可調
*飯類以三杯絲苗米為基準，粥類以半杯米量為基準，稀飯以1杯米量為基準。以上數據僅供參考。									

電路原理圖

提醒

線路可能隨時更改，恕不另行通知。

FS3018B/FS3018R 系列

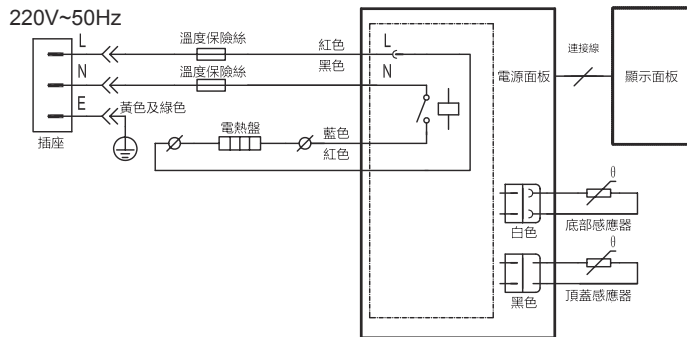

異常現象自我檢查

當認為烹調不正常時，請檢查以下情況以確認是否真的出現故障。

異常情況	超快煮/香甜煮(米)/ 煲仔飯/熱飯/粥/湯/稀飯						保溫						
	太硬	太軟	沒煮熟	氣味	有飯焦	米淘洗出	粥過稀飯太稠	沒有沸騰	不保溫	氣味	變色	米飯表面乾燥	有水滲下
要檢查的項目													
米和水量不正確	○	○	○		○	○	○	○					
超過最大份量	○	○	○		○	○	○	○					
功能選擇是否正確	○	○	○		○	○	○	○					
內鍋是否變形或底部不均勻	○	○	○		○	○		○					
用熱水烹調或沒有冷卻就連續烹調	○	○	○		○			○					
米飯或異物粘在內鍋底部、加熱板或恆溫器上	○	○	○		○	○		○		○	○	○	○
停電	○	○	○		○	○	○	○		○	○	○	○
烹調後翻鬆米飯	○				○						○	○	○
蒸氣閥是否安裝正確	○						○	○					○
定時時間太長	○		○					○					
頂蓋是否關閉正確	○		○				○	○			○	○	○
米未洗好	○		○		○	○				○	○	○	○
米或異物粘在密封圈或內鍋邊緣上	○									○	○	○	○
保溫定時設得太長	○									○	○	○	○
沒有設定保溫而長時間放置										○	○	○	○
內鍋沒有清洗妥當			○								○	○	○
內鍋內放了飯勺											○	○	○
水和米未有充分攪拌		○											

檢查上述情況後，如果確認有故障，請將其送交當地維修網絡進行維修。



Smart Rice Cooker

Instruction Manual

FS3018B
FS3018R

Please read the manual carefully before using this
appliance and keep them for future reference.

Table of Contents

Safety warning	FORBIDDEN, MANDATORY, ATTENTION	03
Product overview	Parts and features	08
	Accessories list	09
	Operation panel	09
Instructions for use	Quick start guide	10
	Functional description	10
Care and Cleaning	Disassemble the lid plate for cleaning	13
	Steam valve cleaning	13
	Cleaning the cooker body	13
Service guide	Technical data of the product	14
	Circuit principle diagram	14
	Anomaly self-checking	14

Safety warning

● Reminder

Basic safety precautions should always be followed to ensure secure use and avoid injury and/or property loss to user and others.

⚠ Note

Conditions unconsidered:
the appliance is used by unsupervised children or the disabled.
the appliance is played with by children.

⊘ Represents [FORBIDDEN] content



Prohibit the use of inferior plugs



Prohibit wet hands from touching



Prohibit combustible products



Prohibit children from operating

- Keep the appliance away from combustibles. During operation, stay away from curtains, drapes, curtain Or in similar articles to avoid the risk of fire.
- Do not use the appliance for food that may cause vent clogging: food in sheets (e.g. laver and Chinese cabbage), food in bands (e.g. kelp), food in pieces (e.g. corn dregs), to avoid accident and damage to the appliance.
- During operation, do not place your hands or face close to the steam vent to avoid burns.

Safety warning

- During operation, do not cover the steam vent with cloth or other articles to avoid accident and damage to the appliance.
- Do not reform the appliance: except for maintenance technicians, persons are not allowed to disassemble or repair the appliance to avoid the risk of fire, electric shock and injury to persons.
- Do not use the appliance on any voltage except for 220V AC to avoid the risk of fire and electric shock. In case of power wire damage, do not use the appliance.
- Do not operate the appliance in the following ways to avoid fire risk and electric shock due to power line damage: Forcibly bend the power cord, keep it close to high-temperature objects, tie up the line or use it to carry weights.
- In case of power plug damage, do not use the appliance to avoid the risk of fire, electric shock and short circuit.
- Do not pull the plug with wet hands to avoid electric shock and injury to persons.
- During operation, do not move or shake the appliance.
- Keep the appliance out of the reach of unsupervised children and babies to avoid dangerous accidents such as electric shock and burns.
- Do not put the appliance in unsteady, damp places or close to other fire and heat sources (e.g. stove). The optimum distance is 30cm. Otherwise, damage or accident may happen to the appliance.
- Do not insert pin, iron wire or other articles into the steam vent at the bottom of the appliance to avoid electric shock and injury to persons.

Safety warning

! Represents [MANDATORY] contents

- Don't immerse the appliance in water or drench with water.
- Independently use grounding socket with rated current of above 13A. When used with Others electrical appliances, the socket will go wrong and lead to dangers such as fire disaster.
- If the power line is too short, user should use an extension socket for connection. Please do not use poor-quality socket. The power consumption of the appliances must not exceed the maximum load of the extension socket.
- Clean the dust and water on both ends of the power line and the socket of the appliance to avoid the risk of fire, electric shock and short circuit.
- When maintenance or parts replacement is necessary, please deliver the product to the authorized professional service centre for maintenance. to avoid hidden dangers caused by improper maintenance or improper selection of accessories.
- The plug should be thoroughly inserted into the socket to avoid the risk of fire, electric shock and short circuit.
- In case of supply cord damage, the cord should be replaced by professionals of the Manufacturer, the Maintenance Department or similar.
- The appliance is for household use only.

Note: Improper repair or short-circuiting without permission of some important accessories including fuse may lead to protection failure of the appliance and cause overheating or fire.

Safety warning

⚠ Represents [ATTENTION] Matters that may cause minor injuries or property loss

- The appliance can only use the original cooking pot to avoid overheating and anomaly.
- Do not drop the cooking pot to avoid deformation.
- Do not impact the cooking pot with hard materials to avoid deformation.
- When operation is being performed or just finished, do not directly touch the inner cooking pot to avoid burns.
- Before operation, wipe dry the water outside the cooking pot to avoid malfunction.
- Before operation, clean the foreign materials including water drops and rice to avoid overheating and short circuit.

🔔 Represents [GENTLE REMINDER] content

- Any discrepancy between the picture and the product is subject to the real object.
- Before operation, check whether the cooking pot and steam valve are in place to avoid accident.
- Before the first usage or after a long time of storage, add water to the steam water level line, select “steam” function and steam for one to two times to clean the interior of the cooker.
- During use, it is normal that the appliance slightly ticks or fizzes. Please do not panic.
- Do not use the appliance immediately after the first cooking, press the “Cancel” button and wait above 15 minutes for the heating plate to cool down.
- Do not boil rice with hot water to avoid affecting the judgement of the temperature control and worsening the result.

Safety warning

- Please regularly clean the steam valve.
- Please regularly clean the countertop on which the appliance is placed.
- The altitude scope for the appliance to properly function is 0~2000m.
- When maintenance or parts replacement is necessary, please deliver the product to the authorized service centre for maintenance to obtain professional quality service. Please keep the manual for future reference.
Thank you.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety。
- Children should be supervised to ensure that they do not play with the appliance。
- This appliance is intended to be used in household and similar applications such as:
 - Staff kitchen areas in shops, office and other working environments;
 - farm houses;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments;
- If the supply cord is damaged, it must be replaced by a special cord or assembly available from the manufacture or its service agent。
- Please turn off and unplug the appliance before cleaning, maintenance or relocation and whenever it is not in use。

Safety warning


- Do not immerse any part of the appliance in water or other liquid.
- The heating element surface is subject to residual heat after use, do not touch.
- Warning: Avoid spillage on the connector.
- Warning: Misuse may cause potential injury.

Product overview

Parts and features

Note

All the drawings in this manual uses FS3018 product as an example. They are for functional reference only. There are differences in the physical products due to different product types and batches.

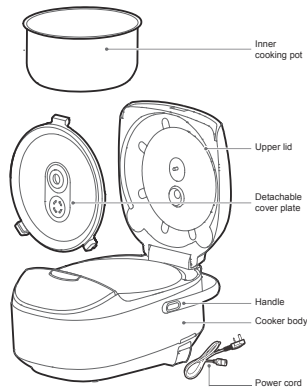

Product overview

Accessories list



Rice spoon X1



Hanging soup spoon X1




Measurement cup X1



Steamer X1

Operation panel

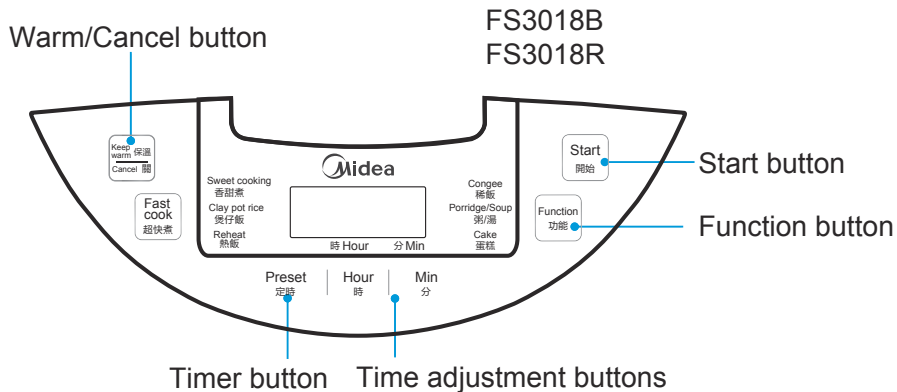

Instructions for use


Quick start guide

Reserve cooking

For example, pre-set 3 measurement cups of (Simiao) long grain rice for cooking the essence rice, and completes after 8 hours.

1 Prepare rice and water

Eg: Cook 3 cups of (Simiao) long grain rice
Place the rinsed rice into the inner pot and choose the appropriate water level according to rice amount.

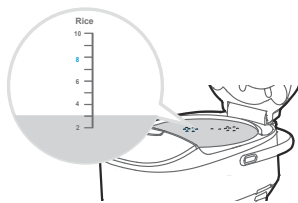

2 Function selection

Close the rice cooker lid, press the "Function" button, select the features you need (such as "Sweet cooking").



3 Set the timer for cooking completion

Gentle Reminder:

Display status refers to actual product;
Press the "Timer" button, enter the pre-set time adjustment mode, then press "Hour" or "Minute" button to adjust the pre-set time.



4 Start cooking

Press "Start" button, the cooking will be finished at appointed time.



5 Cancel cooking

Press the "Keep warm/Cancel" button can cancel the selected cooking function.



Gentle Reminder:

- The time displayed under preset timer mode is the length of time from the start to the completion of cooking;
- The pre-set the time is suggested not for more than 12 hours, otherwise the off-flavor may occur;
- To ensure "Cake", "Clay pot Rice", "Reheat" functions do not have pre-set time mode;
- The selected cooking function's preset time should not be less than the cooking time, such as "Porridge", the cooking time is 2 hours, the pre-set time should be more than 2 hours, otherwise cooking will started immediately.

Functional description

"Function" buttons user instructions:

Press the "Function" button, the indicated light is at the selected function. After selecting the desired function, Press the "Start" button to start the selected function.

Function ▷ Sweet cooking/Clay pot rice/Reheat/Congee/
Porridge/Soup/Cake

Regarding the special instructions on "Fast cook" (it is only limited to products with this function):

The "Fast cook" function is based on the principle of Midea's rice cooker "Five Trilogy" cooking program. When the amount of rice and other factors are the same, the cooking time is shorter than other modes.

Instructions for use

Cake

1 Materials preparation:

Small amount: 3 eggs, 100g caster sugar, 120g cake flour (baking powder), 30g butter (not melted);

Large amount: 5 eggs, 180g caster sugar, 200g cake flour (baking powder), 50g butter (not melted).

- 2 Put sugar, add in eggs, stir the eggs with the egg mixer until it foams. Add in cake powder, stir and mix quickly, and before the foams disappears, quickly pour it into the electric cooker to bake.

- 3 Press the "Function" button, select the "Cake" function.




▷ Cake
蛋糕

- 4 Press the "Start" button to enter the working state.

Soup

- 1 Prepare soup ingredients (such as pig bone, corn, carrots etc.), wash all ingredients and cut into small pieces, then put them into the inner pot, and add water no more than maximum water line.

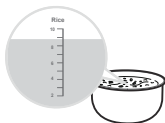

- 2 Close the lid

- 3 Press the "Function" button, select the "Soup" Function.



▷ Soup

- 4 Press the "Start" button, and wait patiently for the function to end.

Start
開始

Clay pot rice

- 1 Mix and stir the ingredients (such as pork ribs) and seasonings (such as onion, ginger, garlic and soy sauce) evenly, and according to individual's taste, pickle the marinated ingredients for a short time.



- 2 In the measurement cup, put the washed white rice (no more than 4 cups) into the inner pot, add the corresponding amount of water, and add suitable amount of peanut oil and stir with white rice together in the inner pot.



- 3 Press "Function" button to select "Clay pot Rice" function, and press "Start" button.



▷ Clay pot rice
煲仔飯

- 4 During the cooking process, when you hear the notification sound, spread the marinated ingredients on the rice, close the lid, and wait patiently for the function to end.



Instructions for use

Reheat

When using Reheat function, the maximum amount of rice cannot exceed Mark 4.

- 1 Loosen the rice; sprinkle 50-80 grams of water on the surface of the rice (take the amount of rice below the Mark 2 as an example).



- 2 Press "Function" button to select the "Reheat" function and press the "Start" button.



- 3 After entering the warm-keeping process, please loosen the rice within 30 minutes for a better taste.



Keep warm

- 1 Press "Keep warm/Cancel" button to enter warm-keeping mode.



- 2 It is recommended that the rice should be loosened within 30 minutes under warm-keeping mode, the taste will be better.




Gentle Reminder:

- After all functions finished cooking, it will automatically enter the warm-keeping mode;
- During the process of warm keeping, the product will be heated to maintain the temperature above 65 degrees Celsius.
- The product can achieve 24-hours water keeping function;

The use of water level lines

rice congee porridge

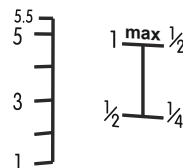

FS3018B/FS3018R Water Level Line

Rice: Refer to the corresponding water level according to the type of rice when adding water.

Note: Clay pot rice can cook up to 4 cups of rice only

Rice

Specification	Maximum rice amount	Minimum rice amount
FS3018B FS3018R	5.5 cups	1 cup

Congee: Refer to the congee water line when adding water.

Congee

Specification	Maximum rice amount	Minimum rice amount
FS3018B FS3018R	1 cup	0.5 cups

Porridge: Refer to the porridge water line when adding water.

Porridge

Specification	Maximum rice amount	Minimum rice amount
FS3018B FS3018R	0.5 cups	0.25 cups


Care and Cleaning

Disassemble the lid plate for cleaning

⚠ Note

Make sure the product is not connected to power supply when cleaning.

- 1 Press **white button a**, pull outwards and remove the lid.

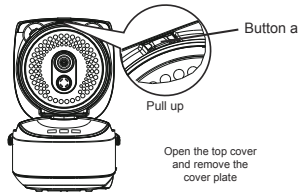


- 2 Rinse the whole cover with water and wipe it dry with cloth;



- 3 Align **top lid slot** band insert the lid, press the lid near the button a, when hears a "click" sound then the installation is complete.

Steam valve cleaning

- 1 Pull it up and remove the steam valve.

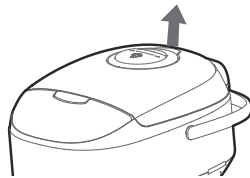

- 2 According to the disassembly mark on the steam valve, after dismantling, clean the steam valve inside, then install it according to the disassembly and installation mark.




- 3 Simply press the steam valve back in place with strength while installing.

Cleaning the cooker body

- 1 Wipe the inner lid with a damp cloth; do not wash directly with water.



- 2 Use a clean cloth to clean the water, rice grain and other debris on the water storage tank and heating plate.

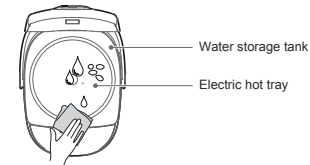

- 3 Wipe the bottom and outer surface of the inner pot with a clean cloth.



Service guide

Technical data of the product

Model	Rated Voltage/ Rated Frequency	Rated Power	Rated Capacity	Rice amount	Product Size Length x Width x Height	Weight
FS3018B FS3018R	220V~50Hz	605W	1.0L	1-1.5 Cup	330*245*198mm	3.00Kg

Cooking time for reference


FS3018B/FS3018R	Quick button	Function Selection Button					
Cooking Mode	Fast Cook	Sweet Cook	clay pot rice	Reheat	Congee	Cake	Porridge/Soup
Cooking Time	around 30min	around 37min	around 53 min	around 25min	around 36min	around 43min	adjustable from 1h-4h
Cooking time is not adjustable							Cooking time adjustable
*The Jasmine rice is based on three cups of Jasmine rice, and the porridge is based on half cups of rice. The congee is based on one cup of rice. The above data are for reference only.							

Circuit principle diagram

Reminder

The electrical wiring is subject to change without prior notice.

FS3018B/FS3018R Series

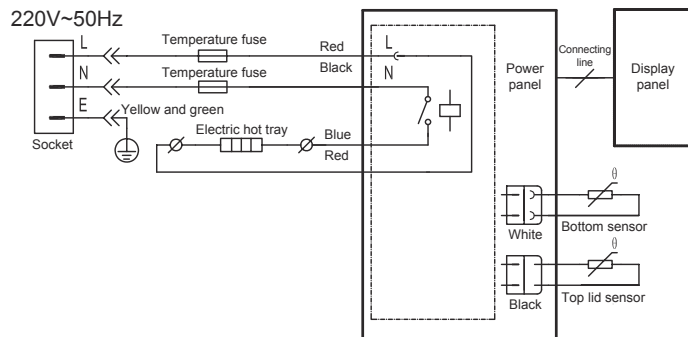

Anomaly self-checking

When you think that cooking is not normal, please check the following conditions to confirm if it is really a malfunction.

Abnormal situation	Fast cook/ Sweet cook (rice/ clay pot rice/ Porridge/Soup/ Congee)						Reheat/ Warm preservation			Keep warm			
	Too hard	Too soft	Not cooked	Odour	Rice stuck on pot	Rice soup overflow	Crisp/burned rice	Performance/ completion too thick	Not boiling	Warm preservation not working	Discoloration	Rice surface is dry	Water dripping
Items to check													
Rice and water quantity is incorrect	○	○	○		○	○	○	○	○				
Exceed the maximum quantity	○	○								○			
Correct function selection	○	○	○		○	○	○	○	○				
Whether the inner pot is deformed or uneven at the bottom	○	○	○			○			○				
Cooking with hot water or continuous cooking without cooling	○	○	○						○				
Rice or foreign objects stick on the bottom of the inner pot, heating plate or thermostat	○	○	○	○	○	○				○	○	○	○
Power outage	○	○	○	○	○	○			○	○	○		○
Slir loose rice after cooking	○						○					○	○
Whether the steam valve installed properly	○							○	○				○
Pre-set time too long	○		○	○				○					
Top lid closed properly		○									○	○	○
Rice not washed properly	○	○	○				○	○			○	○	
Rice or foreign objects stick on the seal ring or inner pot edge												○	○
Warm preservation timer set too long	○										○	○	○
Keep too long with no warm preservation setting										○	○	○	○
The inner pot is not washed properly				○							○		
Rice spoon inside the inner pot												○	○
Water and rice is not stirred well		○											

After the inspection of the above conditions, if it is confirmed that there is a malfunction, please send it to the local maintenance network for repairing.



Midea Warranty Certificate

美的家庭電器保用證（不用寄回）

No. _____

多謝閣下選購美的家庭電器，成為我們尊貴的客戶。

Thank you very much for purchasing Midea Products.

美的電器（香港）有限公司（“本公司”）保證在此保用證上列明之美的家庭電器機件完整及效能完善，並提供30個月免費保養服務（消毒碗櫃及抽濕機免費保用12個月），保用細則如下：

We guarantee to offer 30 months free warranty service (12 months for sterilizing cupboard and dehumidifier) from the date of purchase within the limit of the following conditions:

- (一) 此保用證必須與經銷商發出之正式購買收據一併於修理時出示方為有效。
閣下無需寄回此保用證。
- (二) 此保用證必須有機身編號及購買日期，方可生效。
- (三) 購買日起計之保用期內，機件如有損壞或發生故障，經本公司技術員證實仍在正常使用情況下發生，本公司將提供免費修理及更換零件。經更換後之任何損壞零件，將歸本公司所有。（不包括機殼、損耗性零件及配件）（遙控等配件保用期為三個月。）
- (四) 如此保用證內所列之美的家庭電器：（甲）曾經被非本公司技術員明顯地或非明顯地更改，更改、改換或修理；或（乙）曾因錯誤操作、疏忽使用、穢物滲入機內、意外事件、蟲蛀、天然災害而引致損壞；或（丙）因不正常供電、電壓不正常導致美的家庭電器操作失靈，本保用證將自動失效。
- (五) 如美的家庭電器需要檢驗或修理，客戶須負責將美的家庭電器送往本公司的維修服務站，並於修妥後，於同一地點取回。
- (六) 此保用證只在香港及澳門有效。
- (七) 除本保用證外，任何商號及人士發出之保用證，均不被本公司所認可。
- (八) 如保修期內客戶要求上門檢查服務，須按區域收取上門檢查費（微波爐、洗碗碟機及消毒碗櫃除外）：
市區範圍（香港區、九龍區及新界區）收費HK\$300.-/次；
離島區範圍（大嶼山、長洲、南丫島、坪洲及愉景灣等區域）收費HK\$500.-/次；
（收費如有差異，按本公司最終報價為準）。
- (九) 如客戶要求代為安排運輸收件回本公司檢查及維修服務：
市區範圍（香港區、九龍區及新界區）收費HK\$150.-/次（單程運輸）（微波爐、洗碗碟機及消毒碗櫃在保養期內除外）；
離島區範圍（不設收件服務）。
- (十) 貨品如屬商業或社團性質使用，保用期為半年。
- (十一) 此保用證之中英文版本有差異時，應以中文版本為準。

- (1) This warranty certificate is valid only with dealer's chop and date of purchase and with original purchase receipt presented when service is rendered.
- (2) This warranty certificate will only be valid when the model and serial number stated on this certificate corresponds with that of the product.
- (3) For any defect which in our judgment is caused under normal use, we are responsible for repairing or replacing parts, free of charge within the warranty period commencing from the date of purchase. Any defective part which has been replaced shall become our property.
(Excluding cabinet, consumptive parts and accessories), (Remote control with 3 months warranty) .
- (4) This warranty certificate shall automatically be void if (a) it has been explicitly or implicitly modified, tempered with altered or repaired in any way by persons not authorized by this company, or (b) it has been damaged through misuse, negligence, liquid, accident, insects or natural calamities, or (c) it has become malfunctioned due to power interruption or abnormal voltage input.
- (5) For service, the user will be responsible for the transportation of the product to and from our service stations for repair.
- (6) This warranty certificate is valid only in Hong Kong and Macau.
- (7) Any warranty certificate other than this will not be recognized by this Company.
- (8) If the customer requests any on-site services for maintenance, he/she will be charged according to district areas (Except Microwave Oven, Dish Washer, sterilizing cupboard) District areas (Hong Kong Island, Kowloon Peninsula and New Territories) Charges: HK\$300.-each time Outlying Islands (Lantau Island, Cheung Chau, Lamma Island, Peng Chau, Discovery Bay and etc.) Charges: HK\$500.-each time (If there is any difference in charges, the quotation of our company shall prevail.)
- (9) If the customer demands for the delivery of his/her appliance for checking and repairing. District areas (Hong Kong Island, Kowloon Peninsula and New Territories) Charges:HK\$150.-each time(One-way transportation). (Exclude microwave Oven, Dish Washer, sterilizing cupboard within warranty period). Outlying Islands (goods return service is not provided).
- (10) In the case of commercial or communal use, there will be half a year's guarantee.
- (11) In case there is any inconsistency or conflict between the English version and the Chinese version of the terms, the Chinese version shall prevail.

美的客戶服務中心（香港）

電話：(852) 2443 0082
地址：九龍觀塘開源道 50 號利寶時中心 8 樓 2 室

星期一至五：9am~1pm / 2pm~6pm
星期六：9am~1pm
星期日及公眾假期 休息

美的客戶服務中心（澳門）

電話：(853) 6266 3843
地址：澳門爐石塘30號地下

星期一至六：9：30am-6:30pm
星期日及公眾假期 休息

如有更改以本公司最新版本為準，恕不另行通知
本版本號：V20190625

美的電器香港有限公司

型號：
Model No.:

機身編號：
Serial No.:

Midea Customer Service Centre (Hong Kong)

Tel: (852)2443 0082
Address: Flat 2, 8/F, Lemmi Centre, No.50 Hoi Yuen Road,
Kwun Tong, Kowloon

Monday to Friday: 9:00am~1pm/ 2pm~6pm
Saturday: 9am~1pm
Sunday and public holidays: Closed

Midea Customer Service Centre (Macau)

Tel : (853) 6266 3843
Address : Rua de Camilo Pessanha NO.30 RC Macau

Monday to Saturday: 9:30am-6:30pm
Sunday and public holidays: Closed

Midea Electrical (HK) LTD.

購買日期：
Date of Purchase:

Specifications subject to change without notice
Version: V20190625